


HP LaserJet 1300 Internal Components (2 of 2) Diagram

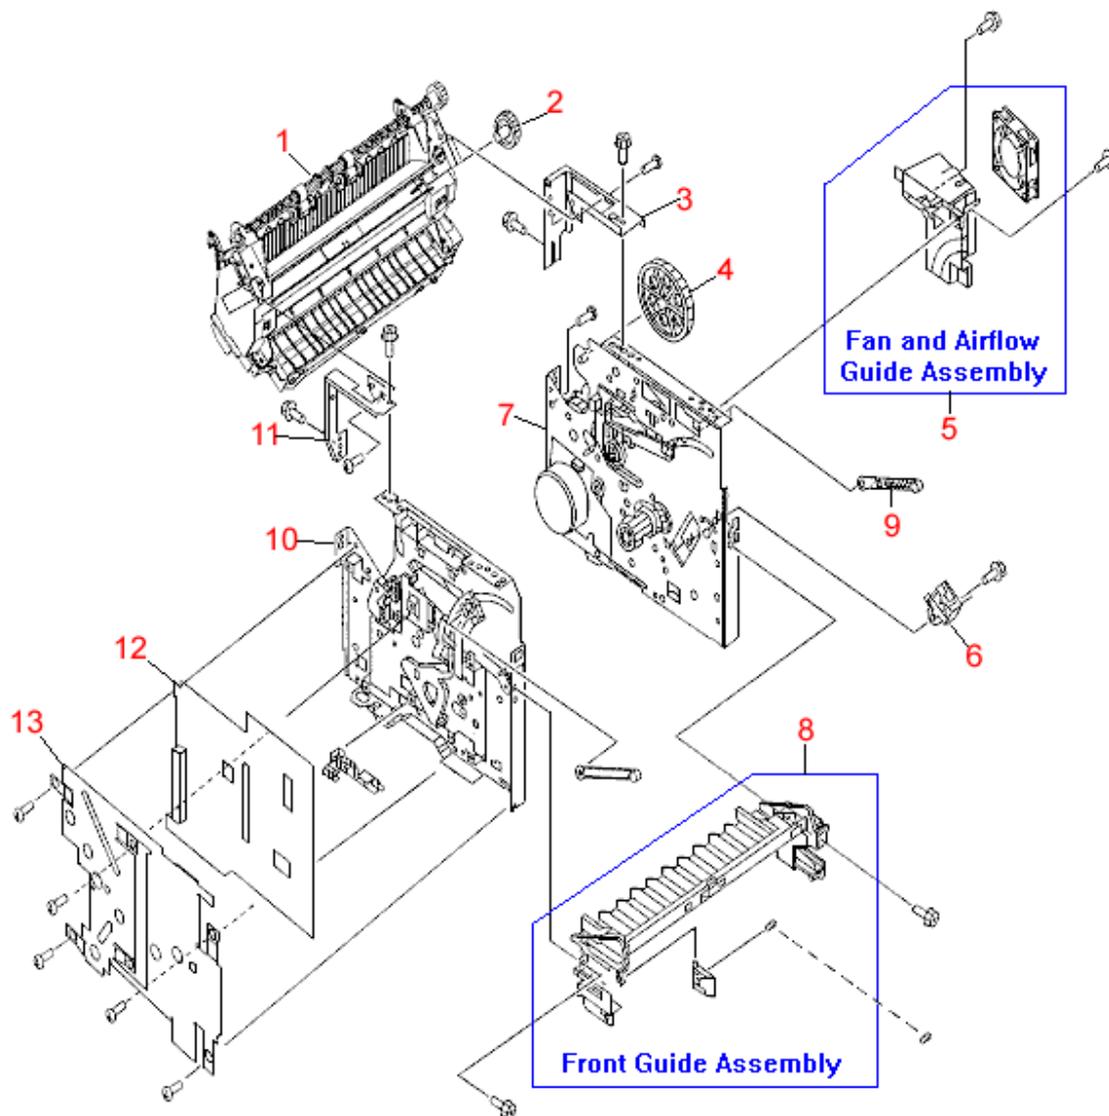

REF	PART #	DESCRIPTION
1	RM1-0715	Fusing assembly - Bonds toner to paper with heat (For 100V to 127V operation) - Mounts in the upper rear of the printer
	RM1-	Fusing assembly - Bonds toner to paper with heat (For 220V to 240V operation) -

	0716	Mounts in the upper rear of the printer
2	RA0-1088	29 tooth gear - Mounts on the end of the pressure roller - Largest of the three gears on the fusing assembly
3	RA0-1186	Right side fuser bracket (L-shaped) - Provides mounting support for the fusing assembly - Mounts to the upper rear corner of the right side plate
4	RA0-1176	69 tooth gear - Large gear with ribs and six small holes - Mounts on on a rod in the upper rear corner of the right side plate
5	RM1-0547	Fan and airflow guide assembly - Mounts to the upper front on the right side plate assembly
6	RH7-5315	24V DC Solenoid - Engages the pickup roller gear/clutch assembly - Mounts on the right side plate assembly
7	RM1-0527	Right side plate assembly - Includes the right side plate, drive motor, most all drive gears, and cam levers - Does not come with the pickup roller solenoid or 69 tooth gear - Right side of the internal printer mechanism
8	RM1-0546	Front guide assembly - Ribbed plastic piece that runs the width of the printer - Mounts to the front of the left and right side plates
9	RA0-1023	Connecting link - Connects between the sliding linkage on the left and right side plates and the toner cartridge access door (two used)
10	RM1-0528	Left plate assembly - Left side of internal printer mechanism - Plate that the formatter PC board mounts to
11	RA0-1185	Left side fuser bracket (L-shaped) - Provides mounting support for the fusing assembly - Mounts to the upper rear corner of the left side plate
12	Q1890-60001	Formatter PC board assembly - Mounts to the left side frame assembly
13	Q1334-00001	RFI shield - Metal plate that covers the formatter PC board